

MMI with Integrated Bluetooth Cell Phone , (QF1),(QF2)

From September 2014

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.




Information Electronics Control Module 1

- J285 Instrument Cluster Control Module
- J533 Data Bus on Board Diagnostic Interface
- J794 Information Electronics Control Module 1, In the Center Console
- ST4 Fuse Panel 4
- SF7 Fuse 7 (On Fuse Panel F)
- T2aq 2-Pin Connector
- T2aw 2-Pin Connector
- T2bh 2-Pin Connector
- T2bm 2-Pin Connector
- T8f 8-Pin Connector
- T12d 12-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T32 32-Pin Connector
- T32b 32-Pin Connector

- 372 Ground Connection 7 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- B159 Diagnostic Connection (in Interior Wiring Harness)
- B444 OBD Connection 1 (in Main Wiring Harness)
- B607 Connection 3 (in Interior Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
 *2 Fiber Optic Cable

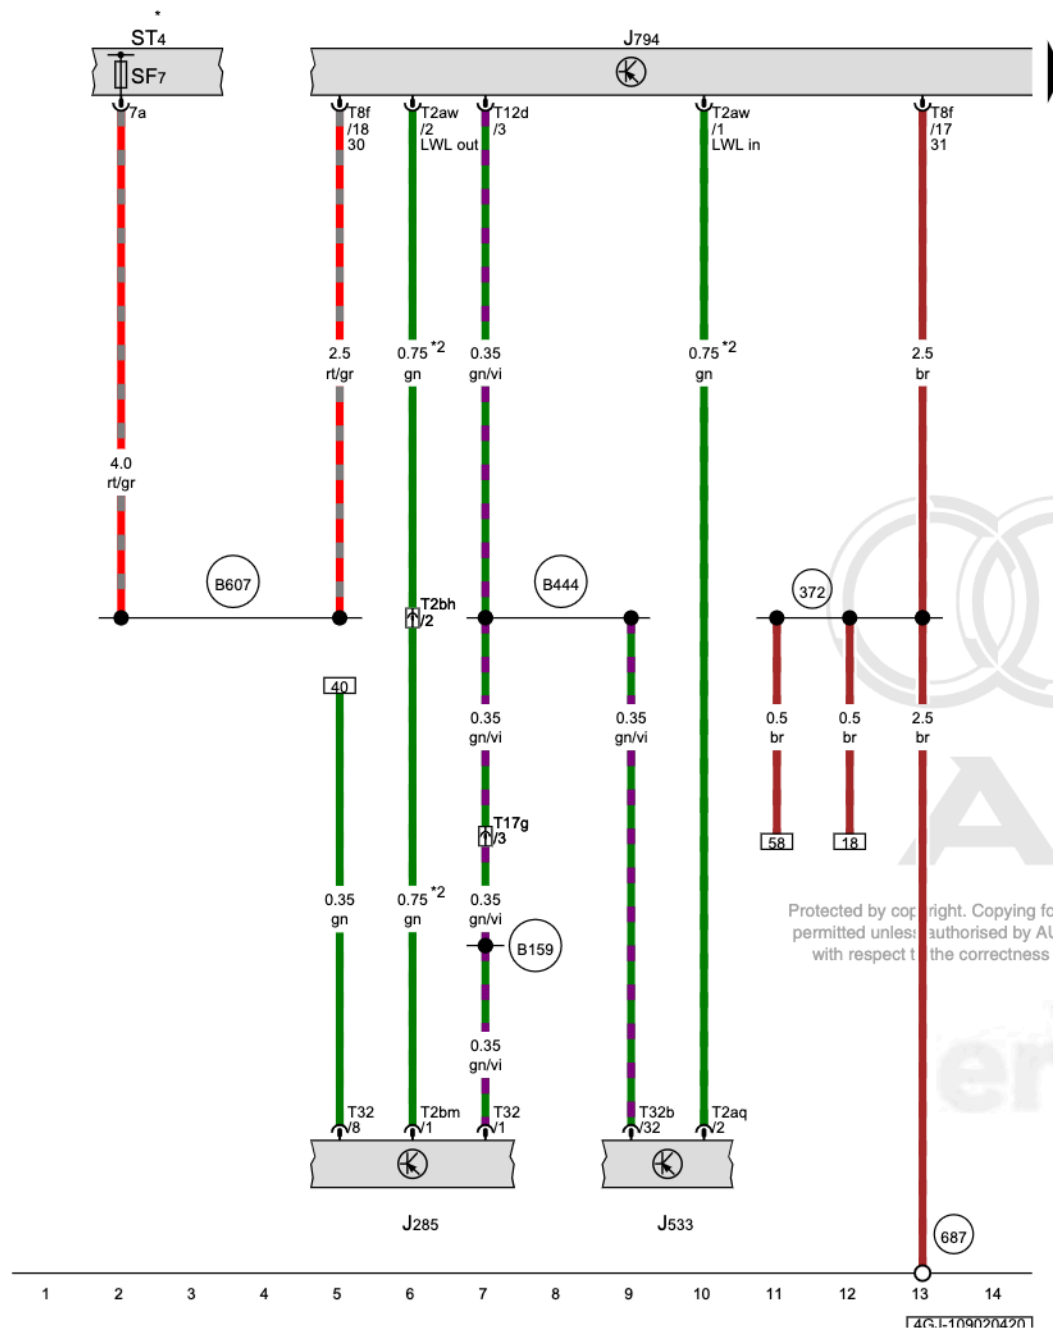

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Multimedia System Control Head, Information Electronics Control Module 1


- E380 Multimedia System Control Head
- J794 Information Electronics Control Module 1, In the Center Console
- ST3 Fuse Panel 3
- SF3 Fuse 3 (On Fuse Panel F)
- T12d 12-Pin Connector
- T20b 20-Pin Connector

373 Ground Connection 8 (in Main Wiring Harness)


687 Ground Connection 1 on Center Tunnel

B318 Positive Connection 4 (30a) (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Prompt Wire

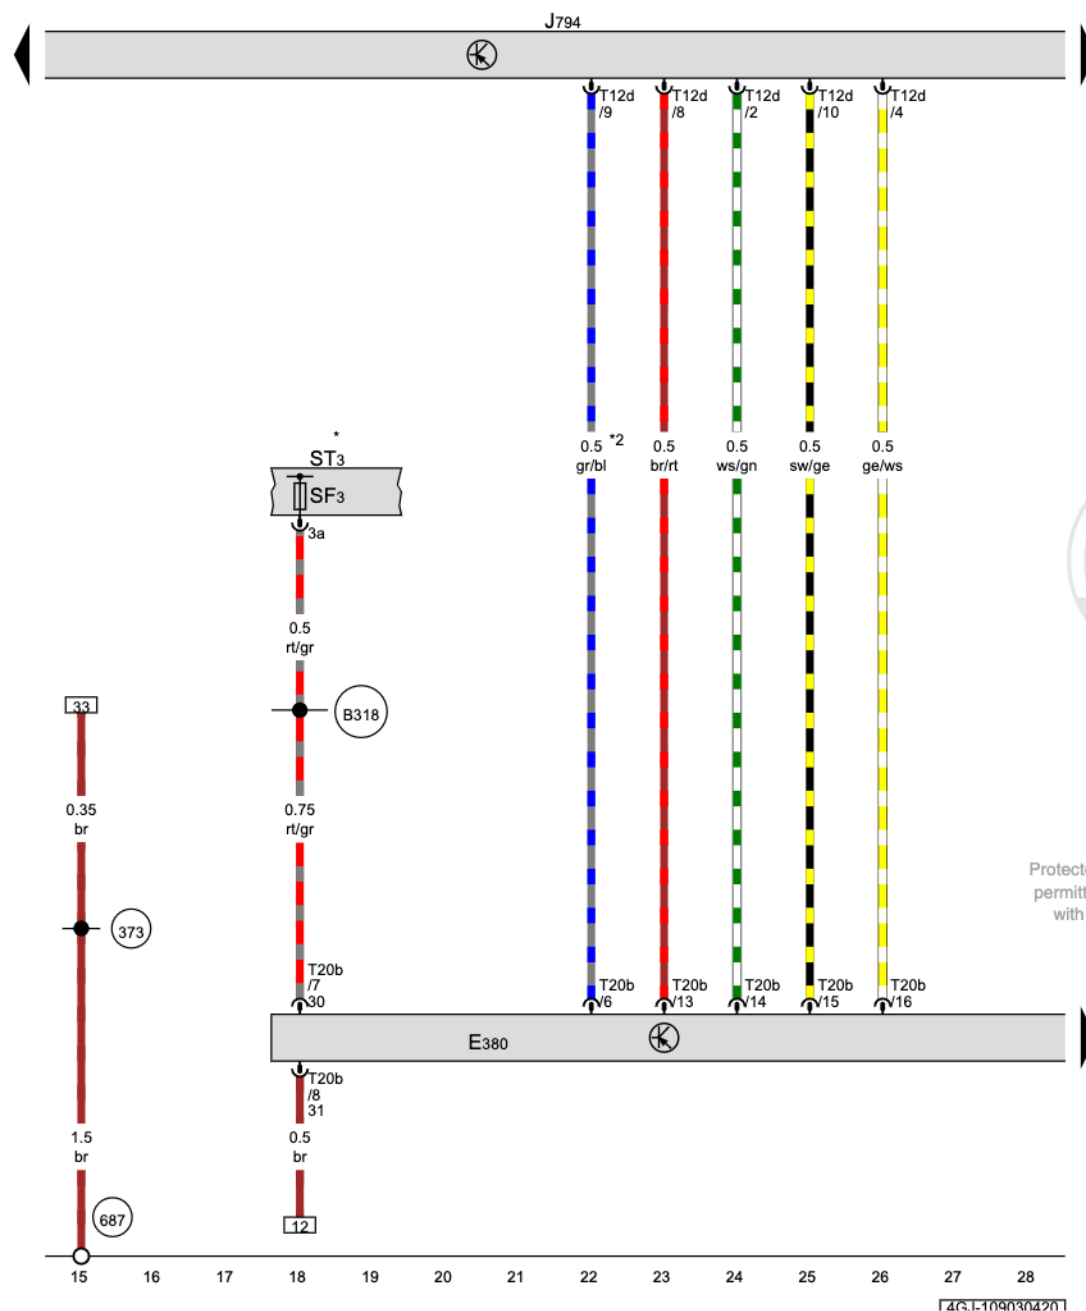

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

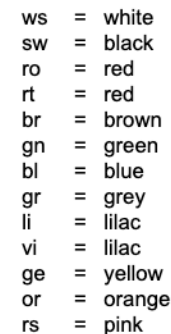

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



653 Ground Connection on Left D-Pillar

654 Ground Connection on Right D-Pillar

* For Vehicles with a Parking Heater

Information Electronics Control Module 1, Telephone Baseplate


- J519 Vehicle Electrical System Control Module
- J794 Information Electronics Control Module 1, In the Center Console
- R126 Telephone Baseplate
- ST2 Fuse Panel 2
- SB2 Fuse 2 (On Fuse Panel B)
- T5g 5-Pin Connector, Near the Telephone Baseplate
- T10t 10-Pin Connector
- T12d 12-Pin Connector
- T32a 32-Pin Connector
- T32c 32-Pin Connector

B731 Connection 58s (in Main Wiring Harness) 1

B732 Connection 58s (in Main Wiring Harness) 2

* Refer to Applicable Wiring Diagram for Fuse Positions

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

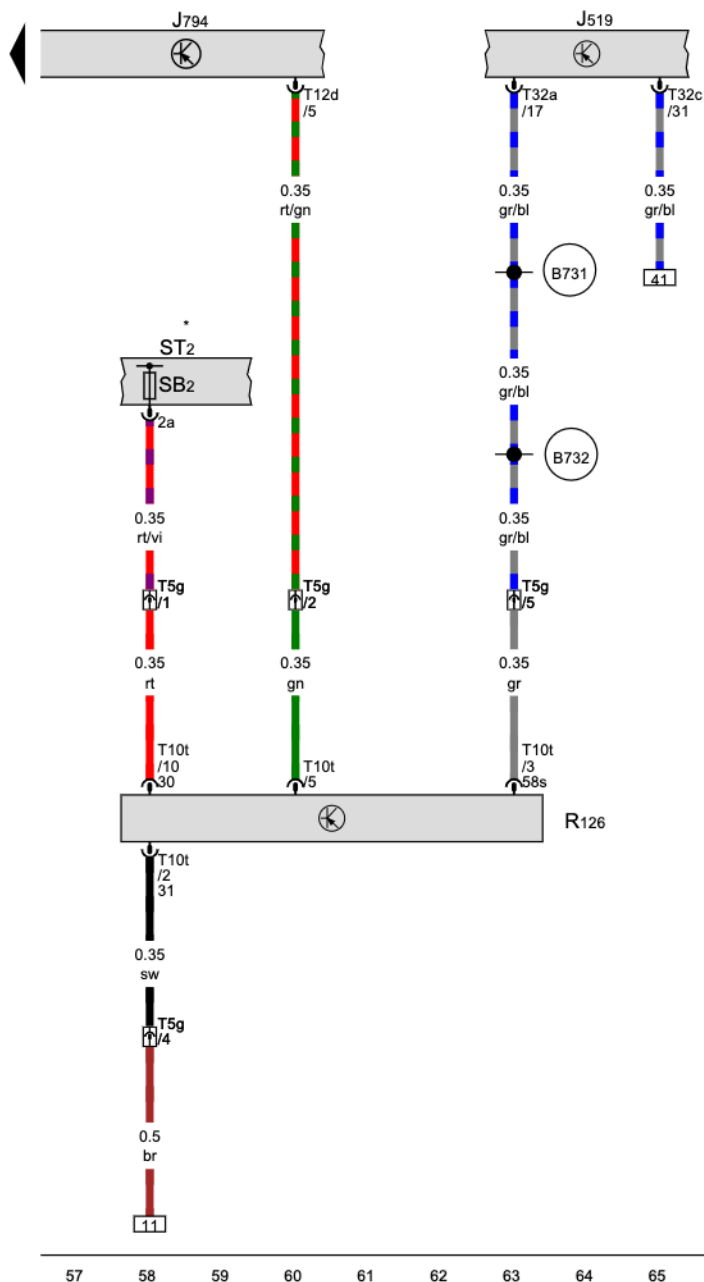

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink